 



500r USER GUIDE

TO FULL SET




Key in your user code and press ENTER (or press ARM on the 525r remote setting device). The exit tone starts. Leave the premises by the designated exit route.
The exit tone stops after a preset time. The alarm system is then set.

TO PART SET

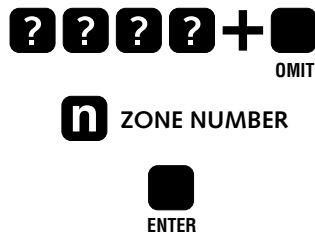

To set your alarm system so that you can move around part of the area normally covered by detectors:
Key in your user code and press OMIT. The panel lights all the zones that will work in part set. Key in the numbers of the zones you want to switch on or off. Press ENTER when you have finished. The exit tone starts. Leave the protected area. The tone stops after a preset time. The system is then set. The panel remembers the zones you selected for part set. The next time you want to part set, enter your user code, press OMIT and then ENTER. The system sets after sounding the exit tone. (If you have a 525r remote setting device, press NIGHT. The panel part sets in 3 seconds.)
Note: The installer may have disabled the part set facility. Contact them if you have any difficulty.

TO SWITCH OFF

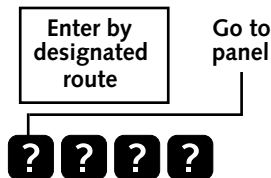

Enter by the designated entry route. The entry tone starts. Go to the control panel and key in your four digit user code (or press OFF on your 525r remote setting device). The system switches off.

IF THE SYSTEM WILL NOT SET

If you are setting or part setting the system, but the panel gives an interrupted tone and zone lights are on, then one or more detectors are being triggered. Check that doors and windows are closed and there is no movement in areas covered by movement detectors.
Try to set the system again. If the fault persists call the installer.

Service Telephone No:

TO RESET AFTER AN ALARM

???

Check the premises

0

RESET

If you use a 525r remote setting device, you can silence an alarm by pressing OFF. To reset the system go to the panel, enter your user code, and press RESET.

The panel sounds the alarm by giving a warbling tone from its internal sounder, and triggering the external bell and strobe (if you have one).

 
Go to the panel, key in your user code. The panel stops the tone and switches off the external bell/strobe. The lights on the panel indicate the cause of the alarm.

To reset system: Press RESET. The panel goes to Standby. If the panel does not go to Standby, call the installer.

Tamper Alarm: If the panel gives an internal alarm while on Standby then go to the control panel. The tamper light will be on. Key in your user code to stop the sounder. Call the installer for service.

TO READ THE LOG

????+3



Your alarm system keeps a record of the last 16 alarm events.

Enter your user code and press 3. The panel lights show the last event.

Press 3 repeatedly to see earlier alarms. The panel gives a low tone when you reach the end of the log.

Press RESET at any time to leave the log.

TO CHANGE YOUR USER CODE

????+2

new user code

Your new code can be any four digit code not starting with 0 (zero). Enter your existing user code and press 2.

The first four zones light. Enter your new user code. The zone lights go out as you enter the new code. The panel gives a double bleep when it accepts the new code.

TO WALK TEST THE DETECTORS

????+1

Walk past detectors

0

RESET

Enter your user code and press 1. The Standby light flashes.

Activate each detector in turn. The panel gives a short double bleep and briefly lights the corresponding zone when it receives a signal from a detector. When you have checked all the detectors press RESET. The panel returns to Standby.

Note: Make sure the movement detectors do not see any movement for three minutes before starting the walk test.

TO TEST BELLS

????+5

0

RESET

????+4

0

RESET

Enter your user code and press 5. The panel sounds the external bell. Press RESET to switch the bell off.

Enter your user code and press 4. The panel flashes the strobe. Press RESET to switch the strobe off.